

Assembly Editing

Copy assembly

Ctrl + V

Cut assembly

Ctrl + X

Paste assembly

Ctrl + S

Snap assemblies

Drag + Ctrl

Unsnap assemblies

Ctrl + Drag

Alter assembly size

Shift + Drag

Multiple selection

Shift + Select

Group assemblies

Ctrl + G

Ungroup assemblies

Ctrl + U

Delete assemblies

Select + Delete

Lock / Unlock assemblies

Ctrl + L

Undo

Ctrl + Z

Redo

Ctrl + Y



experior

File handling

New project

Ctrl + N

Open project

Ctrl + O

Save project

Ctrl + S

Pause / Start

P

Reset model

Ctrl + R

Start/stop motors

Select + +

Alter motor direction

Ctrl + Left Click

Run Control

Increase time scaling

Page Up

Decrease time scaling

Page Down

Infinite time scaling

End

Normalize time scaling

Home

Default camera view

F5

Save camera views

Ctrl + Shift + 1-9

Jump to saved views

Shift + 1-9

Fly to saved views

1-9

Scene / viewing

Orthogonal / isometric

F12

Toggle full screen

F11

Zoom in / out

+ / -

Follow a load

Select + F

Alter centre of 3D scene

Centre cursor + Ctrl + Right click

Assembly Control

Activate assemblies

Select + +

Deactivate assemblies

Select + -

Release loads (run mode only)

Cursor point + F

Load Control

Stop / release load on track

Select + S

Release stopped load

Select + R

Jump back & release load

Select + J

Ungroup & release load

Shift + Space

Enable/disable load

Space

Lock / Unlock scene

Ctrl + L

Show / Hide motors

Ctrl + M

Toggle labels

Ctrl + E

Toggle primitives

Ctrl + P

Scene / details

Toggle shadow

Ctrl + Q

Toggle anti-aliasing

Ctrl + Shift + A

Debug (developer)

Ctrl + Shift + D